

# Application Note

## SPWM Generator for Inverter Design

AN-CM-302

### Abstract

*This app note implements a SPWM Generator. It describes the implemented logic, GreenPAK implementation detail, and the results obtained.*

*This application note comes complete with design files which can be found in the References section.*

---

---

## SPWM Generator for Inverter Design

### Contents

<b>Abstract</b> .....	<b>1</b>
<b>Contents</b> .....	<b>2</b>
<b>Figures</b> .....	<b>2</b>
<b>Tables</b> .....	<b>2</b>
<b>1 Terms and Definitions</b> .....	<b>3</b>
<b>2 References</b> .....	<b>3</b>
<b>3 Introduction</b> .....	<b>4</b>
<b>4 SPWM Inverter Concept</b> .....	<b>5</b>
<b>5 SPWM Characteristics</b> .....	<b>6</b>
<b>6 Implementation and Configuration of SPWM Generator</b> .....	<b>10</b>
<b>7 Tests and Conclusion</b> .....	<b>15</b>
<b>Conclusion</b> .....	<b>16</b>
<b>Revision History</b> .....	<b>17</b>

### Figures

Figure 1: Basic H-bridge circuit .....	5
Figure 2: Basic PWM Control Signals and Output Voltage .....	6
Figure 3: Simplified Schemata of Sinusoidal PWM Modulation.....	6
Figure 4: Sinusoidal PWM Modulation and Output Signals .....	7
Figure 5: Over-modulated SPWM .....	8
Figure 6: SPWM Block Diagram.....	9
Figure 7: SPWM to H-Bridge Connection.....	9
Figure 8: Triangle Waveform Generator.....	10
Figure 9: CNT1 Configuration .....	11
Figure 10: CNT2 Configuration .....	11
Figure 11: CNT0 Configuration .....	12
Figure 12: Odd Output Control .....	13
Figure 13: Modulator Block Diagram.....	13
Figure 14: SPWM Generator Implementation .....	14
Figure 15: System Implementation.....	15
Figure 16: SPWM Output Voltage .....	15
Figure 17: SPWM Output Signal .....	16

### Tables

Table 1: Logic of Switches.....	5
---------------------------------	---

---

## SPWM Generator for Inverter Design

---

### 1 Terms and Definitions

IC	Integrated circuit
IR	Infrared
LED	Light-emitting diode

### 2 References

For related documents and software, please visit:

<https://www.dialog-semiconductor.com/products/greenpak>

Download our free [GreenPAK Designer](#) software [1] to open the .gp files [2] and view the proposed circuit design. Use the [GreenPAK development tools](#) [3] to freeze the design into your own customized IC in a matter of minutes. Dialog Semiconductor provides a complete library of application notes [4] featuring design examples as well as explanations of features and blocks within the Dialog IC.

- [1] [GreenPAK Designer Software](#), Software Download and User Guide, Dialog Semiconductor
- [2] [AN-CM-302 SPWM Generator.gp](#), [GreenPAK Design File](#), Dialog Semiconductor
- [3] [GreenPAK Development Tools](#), [GreenPAK Development Tools Webpage](#), Dialog Semiconductor
- [4] [GreenPAK Application Notes](#), [GreenPAK Application Notes Webpage](#), Dialog Semiconductor
- [5] [AN-CM-265 Programmable Limits PWM](#), Application Note, Dialog Semiconductor.
- [6] [SLG46826V](#), Datasheet, Dialog Semiconductor.

This article was originally published on [EDN](#).

---

## SPWM Generator for Inverter Design

---

### 3 Introduction

Renewable energy continues to be a massive trend around the world. As methods for capturing wind, solar and other forms of renewable energy have developed, the cost and efficiency of renewable energy systems have become more appealing to both companies and consumers. In fact, in 2016, the global monetary investment in renewable energy fell to the lowest number in years, while simultaneously the record was broken for the largest number of renewable energy installations in a given year. With the tradeoff in cost and development changing so greatly, the market for further innovation is booming.

Amongst the components used for renewable energy resources an inverter stands out as a uniquely critical system component. As most renewable energy is generated in DC, an inverter plays a key role in converting the DC into AC for effective integration into existing power grids. In hybrid power systems (combining different renewable resources) and micro-grid systems, the use of inverters is essential.

Renewable energy inverters play a role in industrial applications where single-phase and three-phase motors and other rotary machines are used. Variable frequency and voltage (obtained from an inverter) is the principle of autonomous control in this type of equipment.

To implement the power conversion, DC-AC inverters usually apply the Pulse Width Modulation (PWM) technique. PWM is a useful technique wherein switches like Power MOSFETs are controlled with pulses of variable widths. In order to obtain an automatic control and regulation, the PWM technique is used to maintain the AC voltage output of the inverter (and its frequency) at the nominal value independent of the output load.


Many studies and technologies have been developed to obtain better response from the inverter control system. Conventional inverters change the output voltage according to the changes in the load. To reduce the sensitivity of the output voltage to load changes, PWM based inverters regulate the output voltage by changing the width of the pulses generated at a comparatively high frequency. As a result, the output voltage depends on the switching frequency and pulse width, which varies according to the value of the load connected at the output. With this type of regulation, the inverters provide a constant nominal voltage and a frequency independent of the output power.

Several methods of generating the pulse width modulation have been studied. The efficiency parameters of an inverter, such as switching losses and harmonic reduction, are the main factors considered in any modulation technique evaluation. Because of the analysis of several tests, Sinusoidal pulse width modulation (SPWM) is widely used in power electronics as the modulation method for PWM inverters.

## SPWM Generator for Inverter Design

### 4 SPWM Inverter Concept

A three-phase wave bridge inverter is the most used inverter topology in industrial applications. To simplify the concept a single-phase version is analyzed. The single-phase design includes switching transistors or IGBTs on each arm of the H-bridge with antiparallel freewheeling diodes to discharge when the switch is turned off. Its schematic is shown in [Figure 1](#).

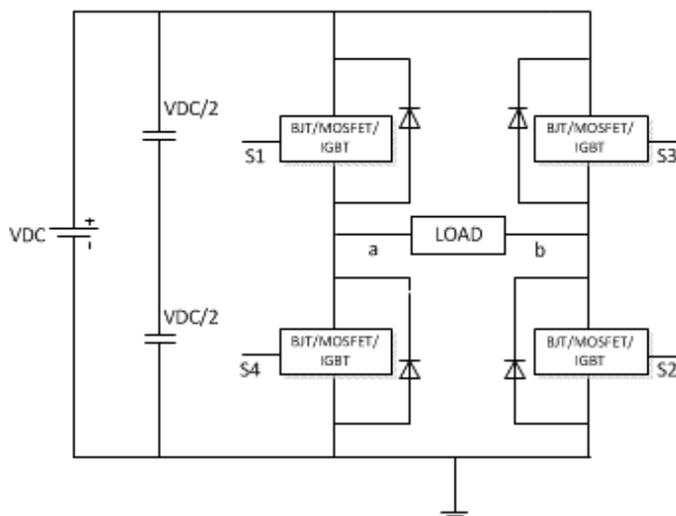

**Figure 1: Basic H-bridge circuit**

The transistors (usually power MOSFETs) are identified as S1, S2, S3 and S4. The switches are alternated such that both transistors of the same arm are not conducting or opened simultaneously, thereby preventing a short circuit.


To generate the alternating current in load, transistors operate in a pair (S1 and S2 conducting, S3 and S4 opened or vice versa). Table I shows the different switching stages and the applied voltage to the load.

**Table 1: Logic of Switches**

S1	S2	S3	S4	Vab
ON	ON	OFF	OFF	+VDC
OFF	OFF	ON	ON	-VDC

A square wave inverter (also known as Basic Inverter) is operated by two square waves in opposite phase and with frequency equal to the desired frequency at the output. One of the waves is applied to S1 and S2 and the other waveform to S3 and S4. [Figure 2](#) shows the PWM control signals and the obtained voltage in the load if this type of inverter is used.

## SPWM Generator for Inverter Design

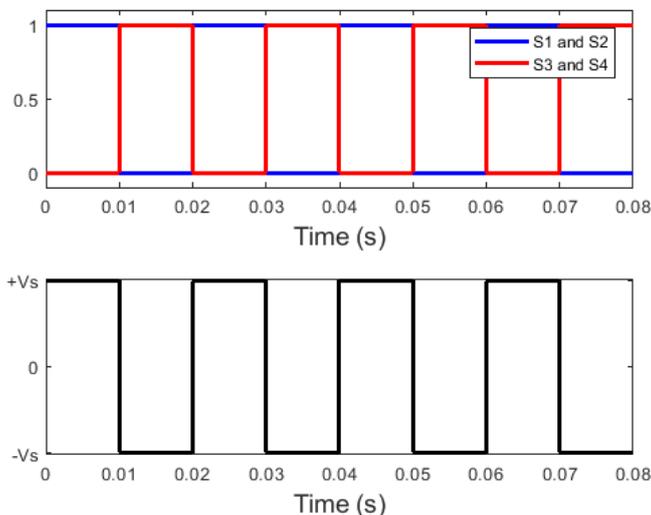

**Figure 2: Basic PWM Control Signals and Output Voltage**


PWM is based on the generation of constant amplitude pulses, with modulation of the pulse duration by varying the duty cycle. The reference or modulated signal is the desired signal output (sinusoidal in the case of voltage waveforms at the output of an inverter) and the carrier signal must have a frequency much greater than the modulated one. This is the main reason for the usage of Sinusoidal PWM (SPWM) as the modulation method for PWM inverters.

### 5 SPWM Characteristics

SPWM modulation is based on constant amplitude pulses with different duty cycles for each period. The width of pulses is obtained by modulation of a carrier to obtain the desired output voltage and to reduce its harmonic content.

The carrier signal of SPWM is usually a triangular wave with a high frequency, generally in several KHz. The modulation signal of SPWM is a sinusoidal waveform with a frequency equal to the desired output voltage frequency (50 or 60 Hz).

In [Figure 3](#), a simplified schematic of sinusoidal modulation is shown. The switching signal is generated by comparing the sinusoidal waveform and the triangular carrier waveform. The comparator output is high when sinusoidal voltage is greater than the triangular voltage. The output pulses of the comparator are used as the gate pulses of the H-Bridge presented in the previous section.

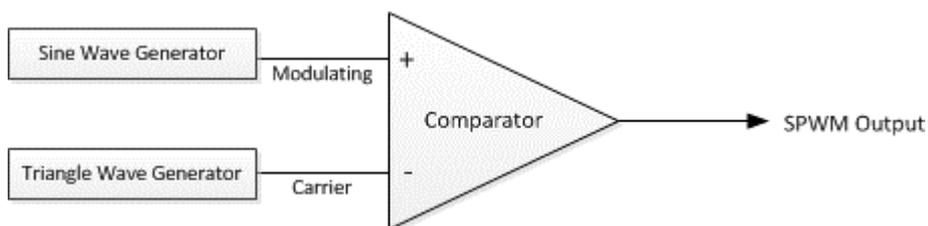


**Figure 3: Simplified Schematic of Sinusoidal PWM Modulation**

In order to obtain better results, the frequency ratio between the triangular and the sinusoidal waveforms must be an integer  $N = f_C/f_S$ , where  $f_C$  is the carrier frequency (the triangular waveform) and  $f_S$  is the modulation frequency (the sine waveform). With this condition, the number of voltage

## SPWM Generator for Inverter Design

pulses per half-cycle results in  $N/2$ . This effect can be seen in Figure 4, where the triangular, sine and the PWM output waveforms are shown.

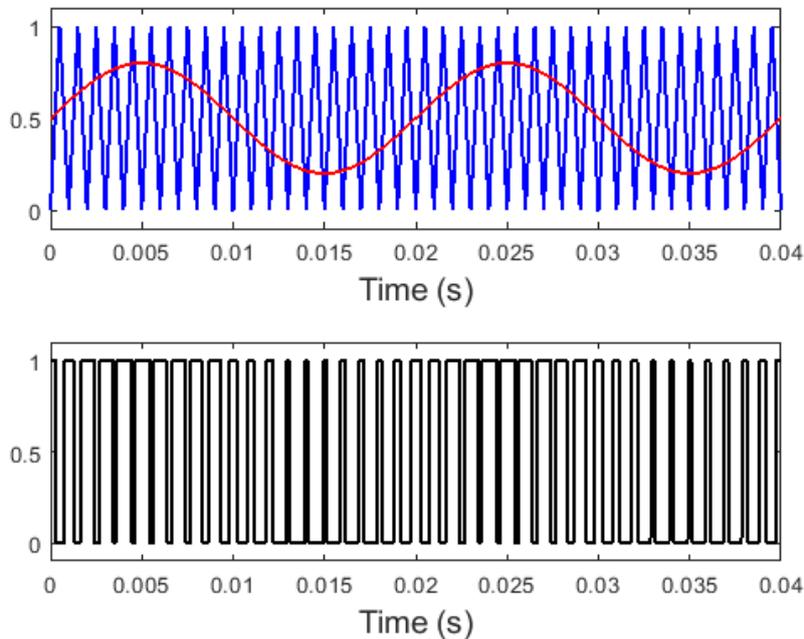

**Figure 4: Sinusoidal PWM Modulation and Output Signals**

If SPWM is analyzed mathematically, a modulation index  $m$  can be defined as the ratio between the amplitude of the sine wave ( $V_s$ ) and the triangular wave ( $V_c$ ):

$$m = \frac{\hat{V}_s}{\hat{V}_c}$$


For regulation range,  $m$  must be equal or less than 1.0. If the previous condition is considered, the output voltage of the H-bridge controlled by SPWM results in:

$$V_{load} = \frac{\sqrt{2}}{4} m V_{DC}$$

Where  $V_{DC}$  is the input DC voltage to the inverter.

The modulation process of duty cycle is designed for  $m$  equal to or less than one. If  $m$  is higher, there will be periods of the triangle signal in which no intersection of the carrier and the modulation signal will exist. The effect on the output signal is shown in figure 5. However, it's important to note that a certain amount of over-modulation is sometimes used with the aim of obtaining a higher AC voltage amplitude.

## SPWM Generator for Inverter Design

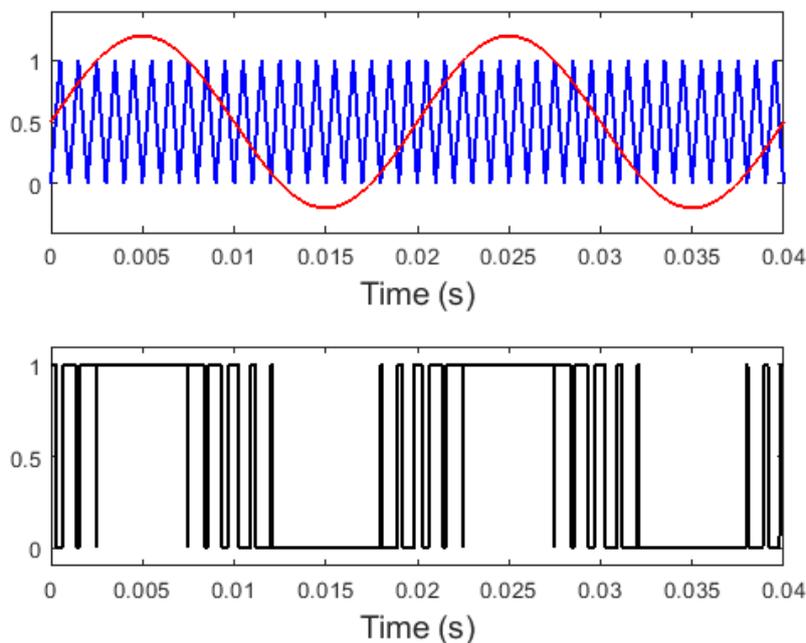**Figure 5: Over-modulated SPWM**

If SPWM is analyzed in terms of waveform quality the harmonics must be considered. The SPWM generates different harmonics of several orders in the voltage waveform. However, the dominant ones are of order  $N$  and  $N \pm 2$  (where  $N$  was defined as  $f_C/f_S$ ). If over-modulation is considered, the output voltage has a higher harmonics content as a trade-off in generating a higher voltage. By varying the sinusoidal voltage, the output voltage can be regulated.

These concepts of triangular waveform with fixed amplitude and frequency and sinusoidal waveform with fixed frequency (equal to the output frequency) and variable amplitude are the basis of the SPWM Generator implemented in this application note.

The SPWM Generator described and implemented in this app note is based on the block diagram shown in [Figure 6](#).

SPWM Generator for Inverter Design

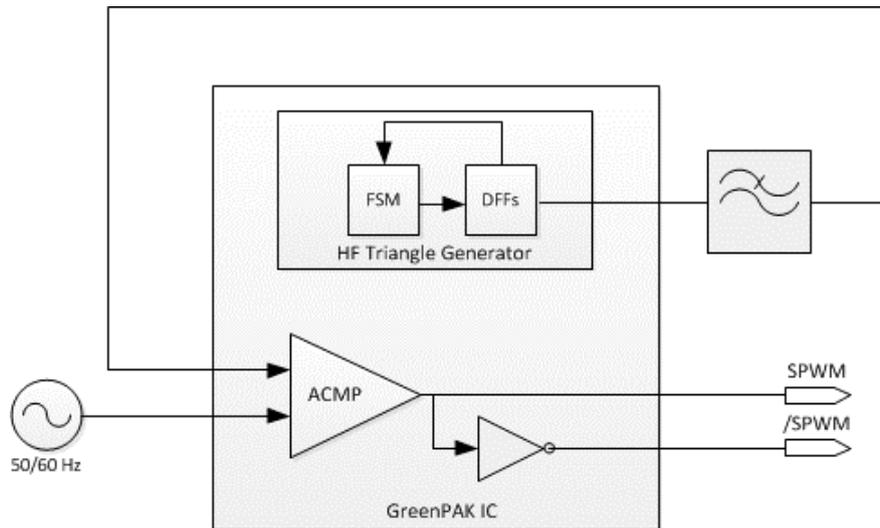


Figure 6: SPWM Block Diagram

A high frequency triangular waveform is necessary to generate the SPWM signals. This task is implemented with finite state machines (FSM)/Counters and D-type Flip Flops and is referenced as HF Triangle Generator in the diagram. The generator is based on the AN-CM-265 Programmable Limits PWM app note [1], generating a PWM with triangular variation of the duty cycle. As a triangular waveform is required, a low-pass filter is applied to eliminate the very-high frequency of the square wave.

This triangular waveform is compared with an external low voltage 50 or 60 Hz sine waveform with the Analog Comparators of the GreenPAK. With this comparison, the sinusoidal modulation of the PWM is implemented as described in the previous section. Finally, an inverter is used to generate the complementary signals for the SPWM outputs.

The output of the SPWM generator is connected to an H-Bridge as shown in Figure 7.

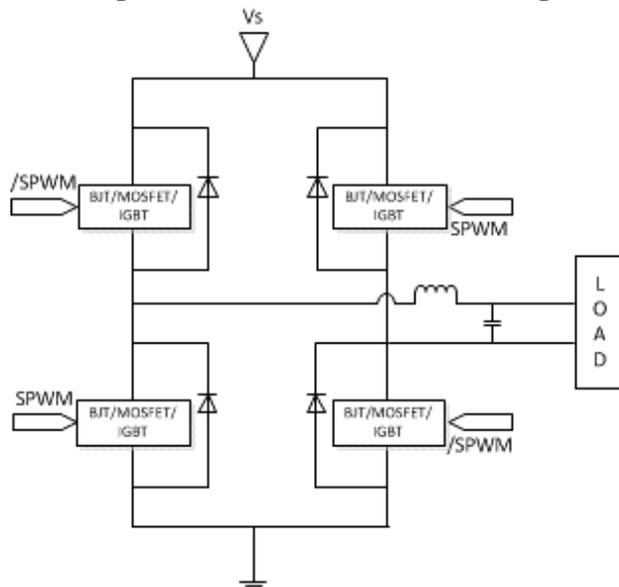


Figure 7: SPWM to H-Bridge Connection


## SPWM Generator for Inverter Design

As seen from [Figure 7](#), SPWM output and its complementary signal are connected one to each transistor of the same leg. The output of the H-Bridge contains an LC-filter so the high-frequency component of the SPWM is filtered, and finally, the sinusoidal waveform of 50 or 60 Hz is applied to the load.

### 6 Implementation and Configuration of SPWM Generator

The implementation of the SPWM Generator is based on a SLG46826V GreenPAK [2]. This Programmable Mixed-Signal ASIC contains Finite State Machine/Digital Counters, High-speed Analog Comparators and high-frequency Oscillators that can be used for generating the required triangular waveform and the sinusoidal modulation.

The high frequency triangular waveform generator is based on the AN-CM-265 Programmable Limits PWM app note [5] The implementation of the generator can be seen in [Figure 8](#).

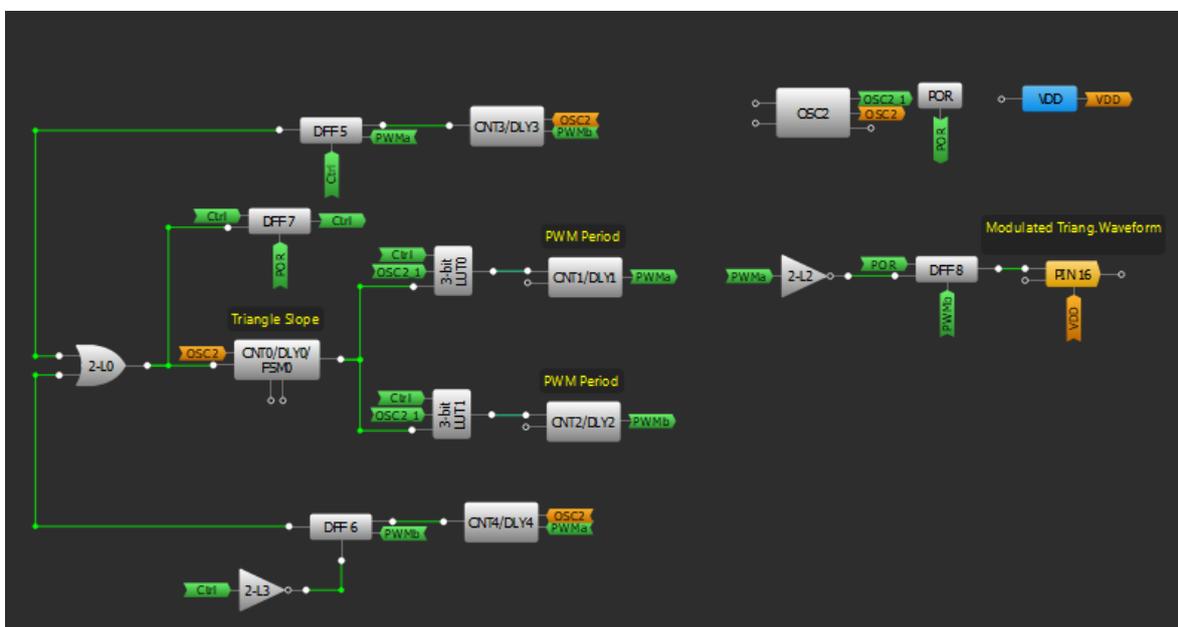

**Figure 8: Triangle Waveform Generator**

The generator uses the internal 25 MHz oscillator, configured for an output frequency of 12.5 MHz. This clock, combined with macrocells CNT1 and CNT2, generates the corresponding square waveform with the desired duty cycle. The configuration of both counters can be seen in [Figure 9](#) and [Figure 10](#).

SPWM Generator for Inverter Design

8-bit CNT1/DLY1 (MF1)	
Multi-function mode:	CNT/DLY
Mode:	Reset counter
Counter data:	249 <small>(Range: 1 - 255)</small>
Output period (typical):	N/D <a href="#">Formula</a>
Edge select:	High level reset
DLY IN init. value:	Initial 0
Output polarity:	Non-inverted (OU)
Up signal sync.:	None
Keep signal sync.:	None
Mode signal sync.:	Bypass
Connections	
Clock:	Ext. Clk. (From mat)
Clock source:	N/D
Clock frequency:	<a href="#">N/D</a>

Figure 9: CNT1 Configuration

8-bit CNT2/DLY2 (MF2)	
Multi-function mode:	CNT/DLY
Mode:	Reset counter
Counter data:	249 <small>(Range: 1 - 255)</small>
Output period (typical):	N/D <a href="#">Formula</a>
Edge select:	High level reset
DLY IN init. value:	Initial 1
Output polarity:	Inverted (nOUT)
Up signal sync.:	None
Keep signal sync.:	None
Mode signal sync.:	Bypass
Connections	
Clock:	Ext. Clk. (From mat)
Clock source:	N/D
Clock frequency:	<a href="#">N/D</a>

Figure 10: CNT2 Configuration

Counter data of both counters is defined to generate a PWM of 50 KHz by applying the expression:

$$f_{Triang\ PWM} = \frac{f_{RCosc}}{CNT1\ Data + 1} = \frac{12.5\ MHz}{249 + 1} = 50\ KHz$$

Relative phase of counters is varied by CNT0/DLY0/FSM0. The slope of triangular duty cycle variation is configured by setting CNT0 counter data following the equation:

$$Time\ for\ Ramp = (CNT0_{Data} + 1) \times \frac{CNT1\ Data + 1}{f_{RCosc}} = (24 + 1) * \frac{250}{12.5MHz} = 500\ \mu s$$

SPWM Generator for Inverter Design

16-bit CNT0/DLY0/FSM0 (MF0)	
Multi-function mode:	CNT/DLY
Type:	CNT/DLY
Mode:	Counter/FSM
Counter data:	24 <small>(Range: 1 - 65535)</small>
Output period (typical):	2 us <a href="#">Formul</a>
Edge select:	High level reset
DLY IN init. value:	Initial 0
Output polarity:	Non-inverted (OU)
Up signal sync.:	Bypass
Keep signal sync.:	Bypass
Mode signal sync.:	Bypass
FSM SET/RST Selection:	Reset to 0
Connections	
Clock:	OSC2
Clock source:	OSC2 Freq. /2

Figure 11: CNT0 Configuration

With this configuration the triangular waveform has a period of 1 ms, so a 1 KHz triangular waveform is obtained. In this design a 50 Hz SPWM inverter is implemented but can be modified for 60 Hz or other frequencies by changing the period of the triangular waveform.

The high frequency PWM with triangular variation is connected to PIN 16, where the corresponding, external low pass filter is connected. This filter is based on a first-order RC filter, with a 1.5 kΩ resistor and a 10 nF capacitor so the cut-off frequency of the filter results 10.6 KHz.

The output of the filter, as shown in the block diagram of [Figure 6](#), is connected to the High-speed Analog Comparator ACMP0H. The Configuration of ACMP0H is shown in [Figure 12](#).

SPWM Generator for Inverter Design

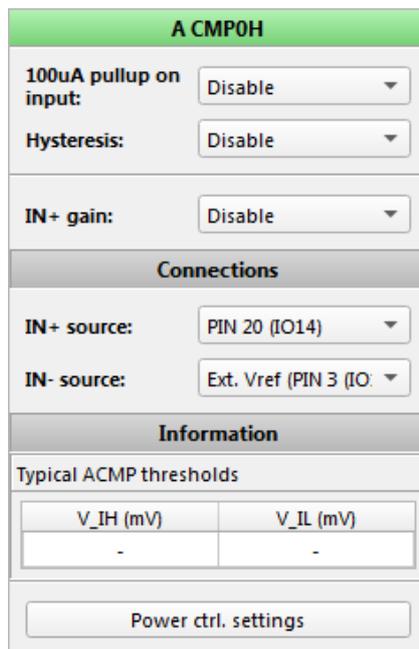


Figure 12: Odd Output Control

This block is used to compare voltage between PIN 20 and PIN 3. For best performance, the hysteresis and the bandwidth limit options must be disabled. Thus, a low voltage sinusoidal waveform generator must be connected to PIN 3 so the sinusoidal PWM modulation is obtained, as shown in Figure 13.

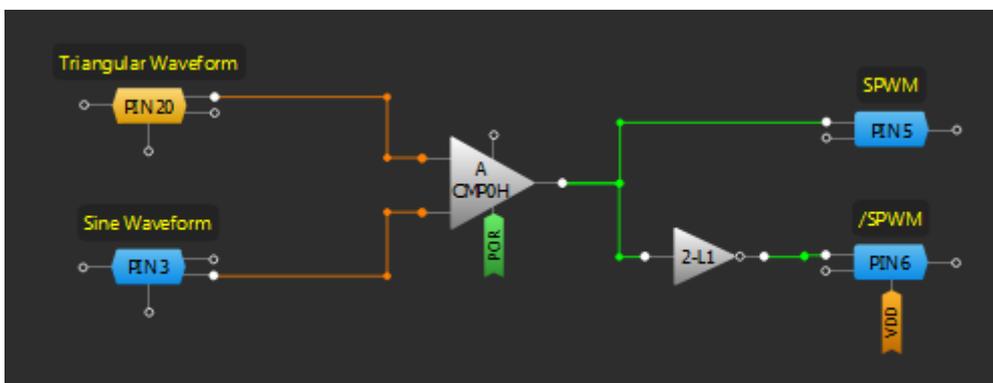


Figure 13: Modulator Block Diagram

In order to generate the complementary signals for PWM output, the 3-L1 look-up table is configured as a logical inverter.

Finally, PWM outputs are connected to Pins 5 and 6.

As Pins 8 and 9 are connected to the I2C module of the GreenPAK IC, it's necessary to connect them with a pull-up resistor to VDD.

The entire SPWM implementation diagram is shown in Figure 14.

SPWM Generator for Inverter Design

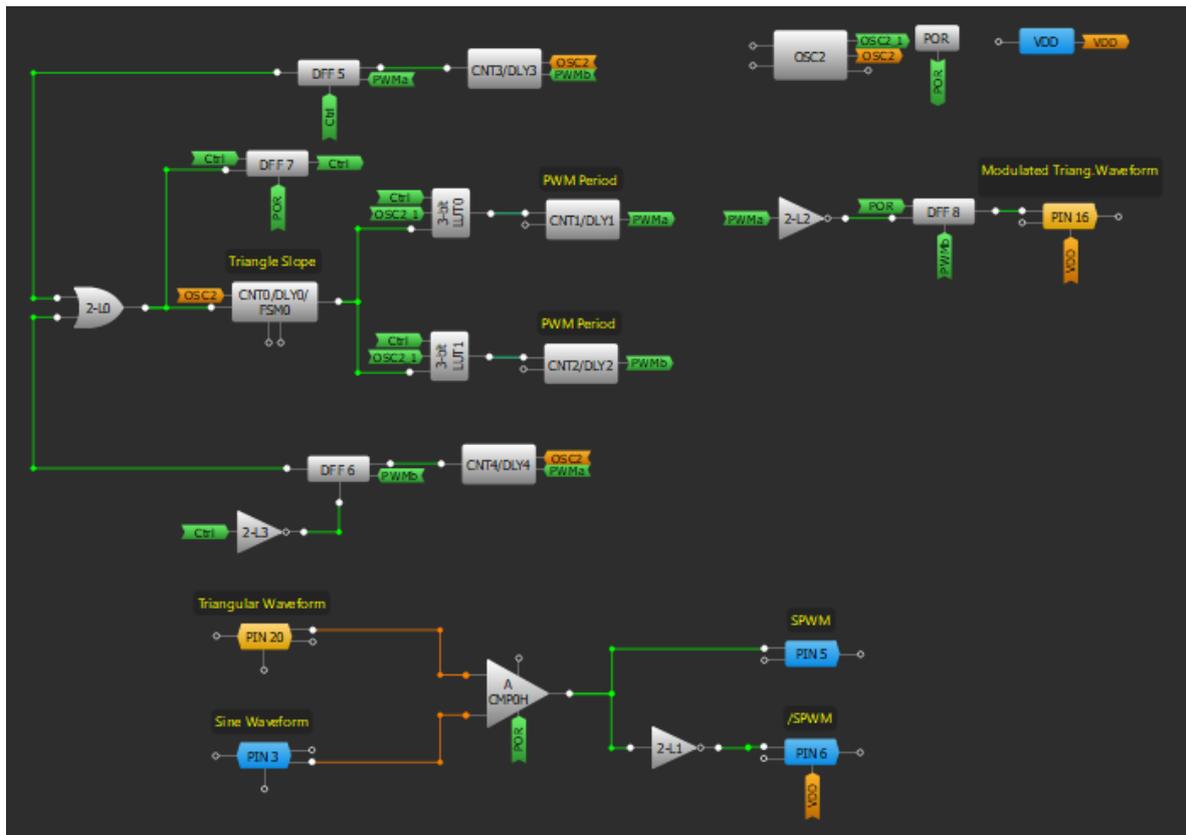


Figure 14: SPWM Generator Implementation

## SPWM Generator for Inverter Design

### 7 Tests and Conclusion

To test the implementation, the entire system was assembled and analyzed with an oscilloscope. The 50Hz sine wave signal was generated with a function signal generator, with a corresponding amplitude and offset such that it can be connected directly to the SLG46826V. The entire system can be seen in figure 15.

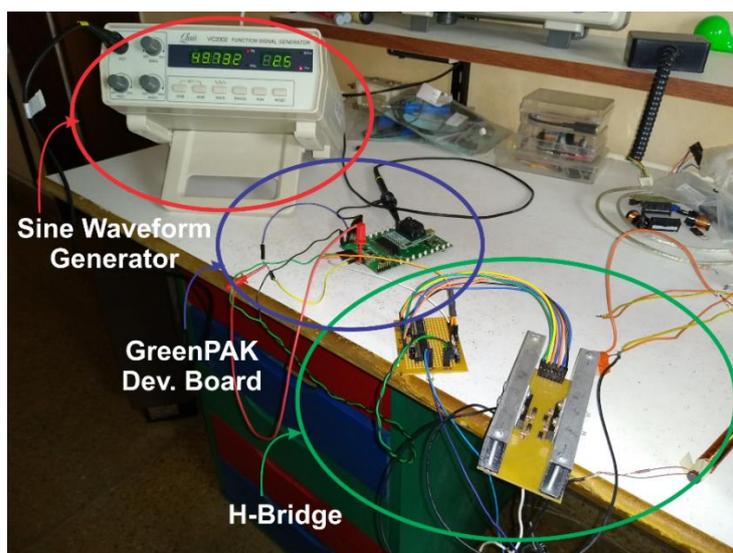


Figure 15: System Implementation

To analyze the results, the voltage waveform at the load and the output signal on pin 5 of the SLG46826V were logged.

In Figure 16, the output voltage applied to the load is shown. It can be seen that the output voltage has a sinusoidal shape if measured after the LC Filter.

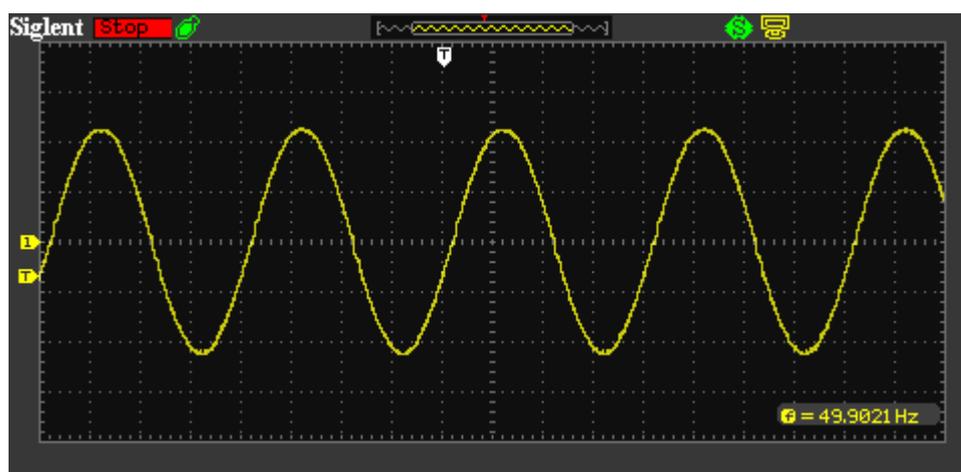


Figure 16: SPWM Output Voltage

In Figure 17, the SPWM output signal at pin 5 of the SLG46826V is illustrated. It shows how the output modifies its duty cycle with a sinusoidal variation.

## SPWM Generator for Inverter Design

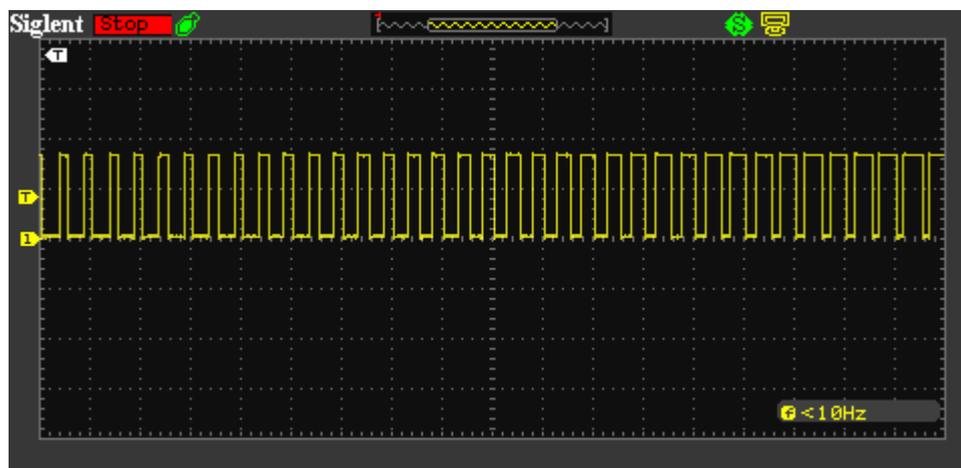


Figure 17: SPWM Output Signal

### Conclusion

In this application note we implemented a Sinusoidal Pulse Width Modulation Generator. Sinusoidal pulse width modulation (SPWM) is one of the most widely used methods for implementing power inverters, useful for different applications such as motor controls and renewable energy applications.

There are several methods of implementing SPWM. In this application note, one of the simplest and most used methods is shown. Each step of SPWM generation and how it can be connected and filtered at the output is described.

The size of the entire measurement system is smaller than many other implementations and outlines where GreenPAK can be used and replace other programmable devices, such as a microcontroller or discrete circuitry.

---

**SPWM Generator for Inverter Design**

**Revision History**

<b>Revision</b>	<b>Date</b>	<b>Description</b>
1.0	13-Oct-2020	Initial Version

## SPWM Generator for Inverter Design

### Status Definitions

Status	Definition
DRAFT	The content of this document is under review and subject to formal approval, which may result in modifications or additions.
APPROVED or unmarked	The content of this document has been approved for publication.

### Disclaimer

Information in this document is believed to be accurate and reliable. However, Dialog Semiconductor does not give any representations or warranties, expressed or implied, as to the accuracy or completeness of such information. Dialog Semiconductor furthermore takes no responsibility whatsoever for the content in this document if provided by any information source outside of Dialog Semiconductor.

Dialog Semiconductor reserves the right to change without notice the information published in this document, including without limitation the specification and the design of the related semiconductor products, software and applications.

Applications, software, and semiconductor products described in this document are for illustrative purposes only. Dialog Semiconductor makes no representation or warranty that such applications, software and semiconductor products will be suitable for the specified use without further testing or modification. Unless otherwise agreed in writing, such testing or modification is the sole responsibility of the customer and Dialog Semiconductor excludes all liability in this respect.

Customer notes that nothing in this document may be construed as a license for customer to use the Dialog Semiconductor products, software and applications referred to in this document. Such license must be separately sought by customer with Dialog Semiconductor.

All use of Dialog Semiconductor products, software and applications referred to in this document are subject to Dialog Semiconductor's [Standard Terms and Conditions of Sale](http://www.dialog-semiconductor.com), available on the company website ([www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)) unless otherwise stated.

Dialog and the Dialog logo are trademarks of Dialog Semiconductor plc or its subsidiaries. All other product or service names are the property of their respective owners.

© 2021 Dialog Semiconductor. All rights reserved.

## Contacting Dialog Semiconductor

### United Kingdom (Headquarters)

*Dialog Semiconductor (UK) LTD*  
Phone: +44 1793 757700

### Germany

*Dialog Semiconductor GmbH*  
Phone: +49 7021 805-0

### The Netherlands

*Dialog Semiconductor B.V.*  
Phone: +31 73 640 8822

### Email:

[enquiry@diasemi.com](mailto:enquiry@diasemi.com)

### North America

*Dialog Semiconductor Inc.*  
Phone: +1 408 845 8500

### Japan

*Dialog Semiconductor K. K.*  
Phone: +81 3 5769 5100

### Taiwan

*Dialog Semiconductor Taiwan*  
Phone: +886 281 786 222

### Web site:

[www.dialog-semiconductor.com](http://www.dialog-semiconductor.com)

### Hong Kong

*Dialog Semiconductor Hong Kong*  
Phone: +852 2607 4271

### Korea

*Dialog Semiconductor Korea*  
Phone: +82 2 3469 8200

### China (Shenzhen)

*Dialog Semiconductor China*  
Phone: +86 755 2981 3669

### China (Shanghai)

*Dialog Semiconductor China*  
Phone: +86 21 5424 9058